




## Setting up your license for 3DXpert

This document explains how to set the license for 3DXpert after 3DXpert has been installed on your computer.

To do that, follow these steps:


1. Save the license file (\*.cml) on your PC.  
Create a dedicated folder on any of your drives and place the license file in that folder.
2. Press Start and launch the 3DXpert Control Panel

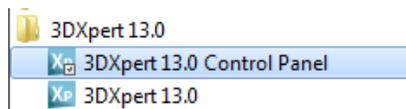

3. In the 3DXpert Control Panel enter Licensing and launch the License Manager



4. As the License Manager launches, press the  button (1) and select the folder where your license file (\*.lic) is located.  
Press the Save button (2) and then close (3) the License manager.

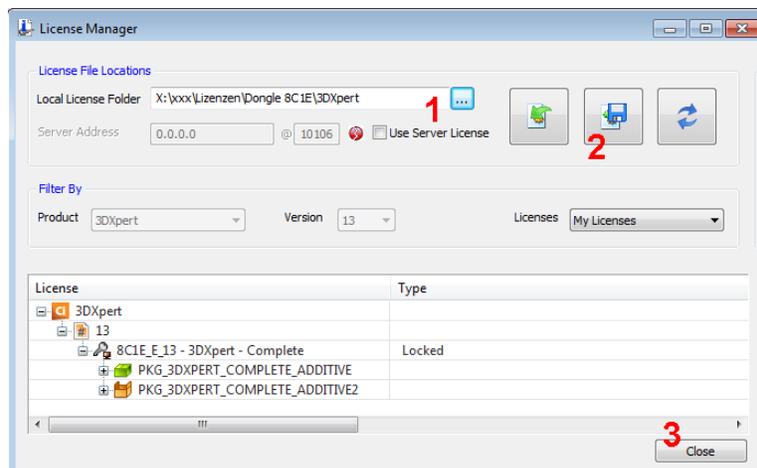

You have finished setting up the license. Launch 3DXpert.